


Knobs dials and brackets

66BR03	6YBUR001	66GA2890K	9BBZM1000210003A
Inside bracket for thermostat manual reset (Stainless steel)	Adjustable knob stop bracket (Fits 66MS and 66MZ knobs)	Bracket converter. Allows to rotate the thermostat bracket position of 90°. Can be used with every thermostat with 2 M4 screws 28 mm distance	Fixed setting cover. Avoid access to adjustment on S and V thermostat types. Replaces knob and dial


** Full reference is defined by the printing
Many mounting plates have been developed for immersion heater enclosures, see catalog No. 2

Assembly examples with internal brackets

Screw driver adjustment thermostat, internal access manual reset thermostat

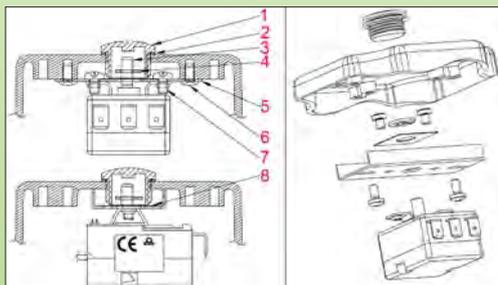

- 1: Silicone cap or cable gland cap
- 2: Gasket
- 3: Adjustment shaft
- 4: Arrow clips or miniature knob
- 5: Internal plate
- 6: Internal plate mounting screws
- 7: Thermostat mounting screws
- 8: Adhesive PVC printed dial

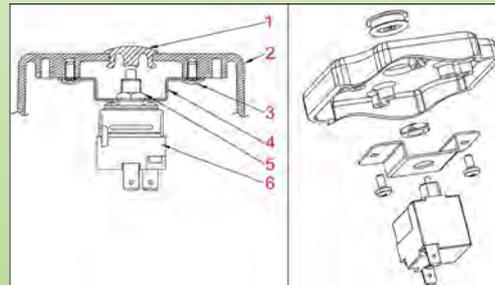

- 1: Silicone cap or cable gland cap
- 2: Enclosure
- 3: Internal plate mounting screws
- 4: Internal plate
- 5: Manual reset button
- 6: Thermostat

Through wall waterproof gaskets for thermostat shafts


They allow mounting a thermostat or a switch through a wall, ensuring a good resistance against water ingress. The gasket, pressing on the shaft, is compressed between the enclosure wall and a counter-plate. A light lubrication of the counter-plate and the inner face of the wall is recommended.

Flammability: UL 94-V0

Hardness: 60 Shore A


Color: black. Other colors available (MOQ apply)

Assembly examples with internal brackets

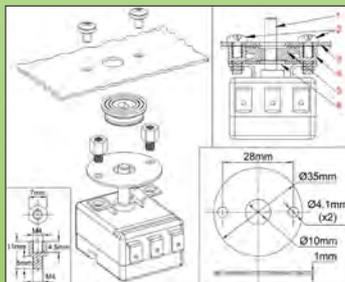

Assembly by 2 holes dia. 4mm, 28 mm distance, with back-plate and M4 spacers

- 1: Thermostat shaft
- 2: M4 x 6 screws for wall-mounting
- 3: Housing wall or mounting board
- 4: M4 spacers
- 5: Sealing gasket
- 6: Stainless steel washer

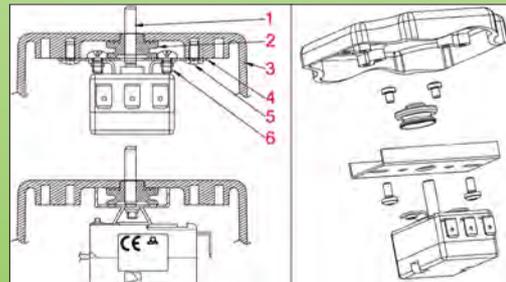

Assembly with back-plate and M4 molded studs (immersion heaters housings)

- 1: Thermostat shaft
- 2: Shaft gasket
- 3: Enclosure with molded bushings
- 4: Internal plate
- 5: Internal plate mounting screws
- 6: M4 x 6 thermostat mounting screws

9BBJO100004010A	9BBJO100004033A	J09BBJO3000RSI001AR
Shaft gasket for thermostats with dia. 6 mm shaft and 4.6 mm flat, outer lip model. Recommended distance between wall and internal plate 5.5 to 6.5 mm	Shaft gasket for thermostats with dia. 6 mm shaft and 4.6 mm flat, without outer lip. Recommended distance between wall and internal plate 5.5 to 6.5 mm	Shaft gasket for rotary switches with 4 mm square shafts, without outer lip. Recommended distance between wall and internal plate 6.5 to 7.5 mm

Unless exceptionally specified by this logo, products and components in this catalogue are made by Ultimheat alliance members.

Because of permanent improvement of our products, drawings, descriptions, features used on these data sheets are for guidance only and can be modified without prior advice

